# **INSTALLATION GUIDE**

#### TABLE OF CONTENTS

- A -TOOLS & SPECIFICATIONS
- **B** SYSTEM COMPONENTS
- C SYSTEM COMPONENTS
- **D**-SYSTEM COMPONENTS
- E SYSTEM LAYOUTS
- F THERMAL EXPANSION LIMITS
- G -FLASHING & SLIDERS
- H -1ST ROW INSTALLATION
- I -TRIMRAIL & MICRORAIL INSTALLLATION

SFM SUN FRAME MICRORAII TM

- J MODULE MOUNTING
- K MODULE MOUNTING
- L -FLOATING TRIMRAIL INSTALLATION
- M MICROINVERTER & WIRE MANAGEMENT
- N MICROINVERTER & WIRE MANAGEMENT
- **O** -FINISHING TOUCHES
- P FINISHING TOUCHES
- Q SYSTEM BONDING & GROUNDING
- R –UL CODE COMPLIANCE NOTES
- S TESTED/CERTIFIED MODULE LIST
- T MODULE MAINTENANCE
- U CONSIDERATIONS & MAINTENANCE

#UNIRAC

### **SFN** SUN FRAME MICRORAIL

# TOOLS & SPECIFICATIONS INSTALLATION GUIDE PAGE



#### **TECHNICAL SPECIFICATIONS:**

#### Material Types All extruded components:

6005A-T61 or 6061-T6 Aluminum

Hardware: Stainless Steel

#### Bonding and Grounding: Integrated in

Microrail<sup>™</sup> (Trimrail<sup>I™</sup> and row to row bonding require additional components)

#### TOOLS REQUIRED OR RECOMMENDED FOR LAYOUT, FLASHINGS & ROOF ATTACHMENTS:

- Hammer
- Marker / crayon
- Measuring tape
- Drill
- Pilot drill bit
- Pry bar
- String line

#### TOOLS FOR MODULE INSTALL:

- Drill and socket adapter or socket wrench
- 1/4" hex driver
- Torque wrench
- 1/2" socket (optional)

#### SAFETY:

All applicable OSHA safety guidelines should be observed when working on a PV installation job site. The installation and handling of PV solar modules, electrical installation and PV racking systems involves handling components with potentially sharp metal edges. Rules regarding the use of gloves and other personal protective equipment should be observed.


#### **TORQUE SPECIFICATIONS:**

All SFM Hardware	20 ft-lbs (unless otherwise noted)
Grounding lugs	Per Page "Q"



# SYSTEM COMPONENTS INSTALLATION GUIDE PAGE

B

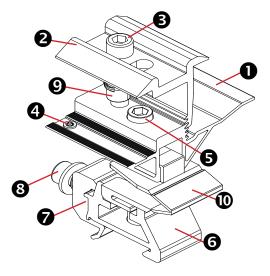

#### SUNFRAME Microrail<sup>™</sup> - 2"

#### Sub-Components:


- Base 1.
- 2. Cap
- Clamp Socket Head Cap Screw 3.
- Bondina Pin 4.
- Height Adjustment Feature 5.
- 6. Tower
- 7. Dovetail Lock
- 8. Dovetail Socket Head Cap Screw
- Spring Clip 9.
- 10. Anti-rotation Clip

#### Functions:

1 or 2 module support to roof attachment ٠

#### Features:

- Arrives on-site pre-assembled and ready for installation
- Cap indicates module height compatibility Supports discrete module thicknesses from 32mm to 46mm
- Receiving feature that allows simple module placement, ٠ tightening of fasteners and eliminates working over modules.

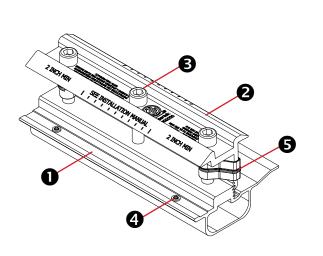

#### SUNFRAME Microrail<sup>™</sup> 6.5" Splice

#### Sub-Components:

- 1. Base 2.
- Cap (3) Clamping Socket Head Cap Screws 3.
- Bonding Pins 4.
- 5. (2) Spring Clips

#### Functions:

- 2,3 or 4 module support & connection •
- E-W module to module bonding

#### Features:

- Arrives on-site pre-assembled and ready for installation
- Cap indicates module height compatibility
  - Supports discrete module thickness from 32mm to • 46mm
- Receiving feature that allows simple module placement, • tightening of fasteners and eliminates working over modules.
- Does not rattach to roof

#### SUNFRAME Microrail<sup>™</sup> 8" Attached Splice

#### Sub-Components:

1. Base

6

- 2. Cap
- (2) Clamp Socket Head Cap Screws 3.
- (2) Bonding Pins 4.
- 5. Height Adjustment Feature
- 6. Tower
- 7. Dovetail Lock
- Dovetail Socket Head Cap Screw 8.
- (2) Spring Clip 9.
- 10. Anti-Rotation Clip

#### Functions:

- 2, 3, or 4 module support to roof attachment (when attach-٠ ment is necessary at splice point) ٠
- E-W module to module bonding

#### Features:


- Arrives on-site pre-assembled and ready for installation Cap indicates module height compatibility
  - Supports discrete module thickness from 32mm to 46mm
- Receiving feature that allows simple module placement, tightening of fasteners and eliminates working over modules.



# SYSTEM COMPONENTS INSTALLATION GUIDE PAGE

ก

2

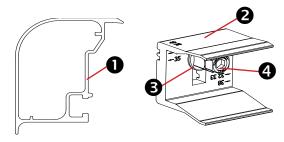

#### Trimrail<sup>™</sup> and Module Clips

#### Sub-Components:

- 1. Trim Rail
- 2. Module Clip
- 3. T-Bolt
- 4. Tri-Drive Nut

#### Trimrail™

#### **Functions:**

- Required front row structural support (with module clips)
- Module mounting
- Installation aid
- Aesthetic trim

#### Features:

- Mounts directly to L-feet
- Aligns and captures module leading edge
  - Supports discrete module thicknesses from 32, 33, 35, 38, and 40mm

#### **Module Clips**

#### **Functions:**

- Required front row structural support (with trimrail)
- Module mounting

#### Features:

- Mounts to Trimrail<sup>™</sup> with T-bolt and tri-drive nut
- Manually adjustable to fit module thicknesses 32, 33, 35, 38, and 40mm.

#### Trimrail<sup>™</sup> Flashkit

#### Sub-Components:

- 1. L-Foot
- 2. Hex bolt

2

5

- 3. Tri-drive nut
- 4. Channel Nut
- 5. Scocket Head Cap Screw
- 6. 3"Channel/Slider w/grommet
- 7. Flashing
- 8. Structural Screw & SS EPDM Washer

#### **Functions:**

- Attach Trimrail<sup>™</sup> to roof attachment / flashing
- Patented roof sealing technology at roof attachment point

8

#### Features:

- Slot provides vertical adjustments to level array
- Slider provides north/south adjustment along the slope of the roof
- Shed and Seal Technology

#### Trimrail<sup>™</sup> Splice

#### Sub-Components:

- 1. Structural Splice Extrusion
- 2. Bonding Clip

#### Functions:


- Front row structural support
- Installation aid
- Structurally connects 2 pieces of Trimrail<sup>™</sup>
- Electrically bonds 2 pieces of Trimrail<sup>™</sup>

#### Features:

- Aligns and connects Trimrail<sup>™</sup> pieces
- Tool-less installation



## SYSTEM COMPONENTS INSTALLATION GUIDE PAGE

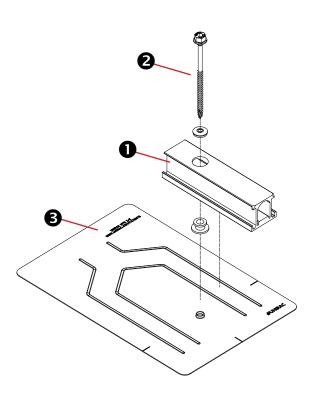

#### SFM Slider Flashkit

#### Sub-Components:


- 1. Slider w/grommet
- 2. Structural Screw & SS EPDM washer
- 3. Flashing

#### **Functions:**

- Patented Shed & Seal roof sealing technology at roof attachment point
- For use with compatible 2" Microrail or 8" Attached Splices

#### Features:

- Slider provides north/south adjustment along the slope of the roof
- Shed and Seal Technology

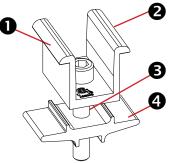

#### Module-to-Module N-S Bonding

 
#### Sub-Components:

1. Clamp

- 2. Bonding Pins (2)
- 3. 5/16" Socket Head Cap Screw
- 4. Clamp Base

#### **Functions/ Features:**

- Row to row bonding
- Single Use Only
- Fits module sizes 32-40mm




#### Trim -to- Module Bonding Clamp and Floating Trim Clamp

#### Sub-Components:

- 1. Wedge
- 2. Bonding Pin
- 3. T-Bolt
- 4. Nut
- 5. Cast Base

#### **Functions/ Features:**

- Module to Trimrail<sup>™</sup> bonding single use only
- Attaches Trimrail<sup>™</sup> to module when fewer than 2 rafter attachment points are available
- Fits module sizes 32-40mm
- Fits module sizes 32-40mm

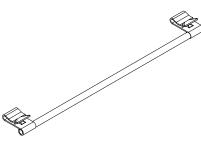


#### Wire Bonding Clip w/ 8AWG

#### **Functions:**

- Row to row bonding
- Module to Trimrail<sup>™</sup> bonding
- Single Use Only

#### Features:

Tool-less installation

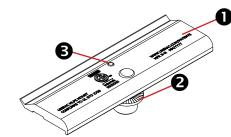

#### **MLPE Mounting Assembly**

#### Sub-Components:

- 1. MLPE Mount Base
- 2. 5/16 Socket Head Cap Screw
- 3. Bonding Pin

#### **Functions:**


- Securely mounts MLPE to module frames
- MLPE to module bonding

#### Features:

- Mounts easily to typical module flange
- UL2703 Recognized

MLPE = Module Level Power Electronics, e.g. microinverter or power optimizer



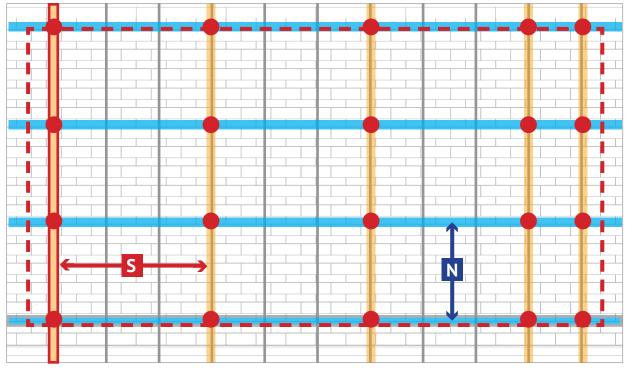

**TO STAGGER ATTACHMENTS:** Shift each subsequent row of attachments one rafter over.



1. Determine appropriate array location on roof. NOTE: Consult local AHJ regarding setback requirements

2. Select starting course of shingles (or tiles)

3. Mark next row of attachments and repeat for remaining rows



- NS distance equals module width +1"

4. Locate 1st rafter closest to array edge (and inside array footprint) and mark

5. Find next rafter for attachment based on appropriate span

- Continue to end of array
- Mark last rafter before end or array


Span

S

6. Mark attachment points on rafters along each NS module grid line

7. Refer to Unirac SFM D&E Guide and U-Builder for allowable spans and cantilevers.

See the Design and Engineering Guide for details on regional max spans and overhang.

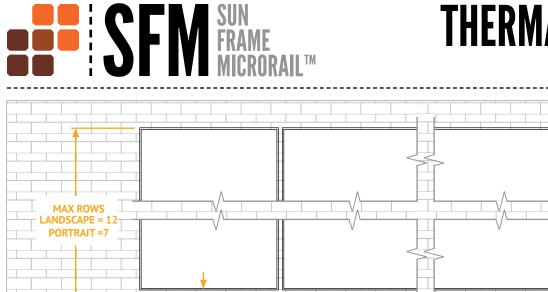

**INSTALLED E/W** 

MAXIMUM EAST / WEST ARRAY & TRIMRAIL LENGTH NO GAP BETWEEN MODULES: 33 FEET 0.1" to 1" GAP BETWEEN MODULES: 100 FEET

- MODULE GAP

0.0" TO 1"

1" N/S GAP SET

**BY SFM SYSTEM** 

**GEOMETRY** 

## THERMAL EXPANSION LIMITS

#### NORTH-SOUTH THERMAL EXPANSION LIMITS:


- 12 Rows of modules Landscape orientation
- 7 Rows of modules Portrait Orientation

#### EAST-WEST THERMAL EXPANSION LIMITS:

- 33ft. with no module gap (butted modules)
- 100ft. with a minimum module gap of 1/8"




## FLASHING & SLIDERS INSTALLATION GUIDE PAGE

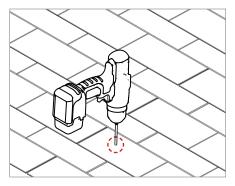

#### PILOT HOLES:

Drill pilot holes for lag screws or structural screws (as necessary) at marked attachement points

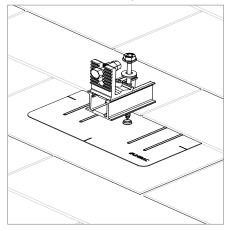




• Insert flashings per manufacturer instructions

NOTE: Use Lag screw or structural fastener with a maximum diameter of 5/16"

FLASHINGS:


Place flashings

- Attach sliders to rafters
- Verify proper row to row spacing for module size (Mod NS + 1")
- Ensure that TrimrailTM roof attachments in each row have sufficient engagement with slider dovetails for proper attachment.

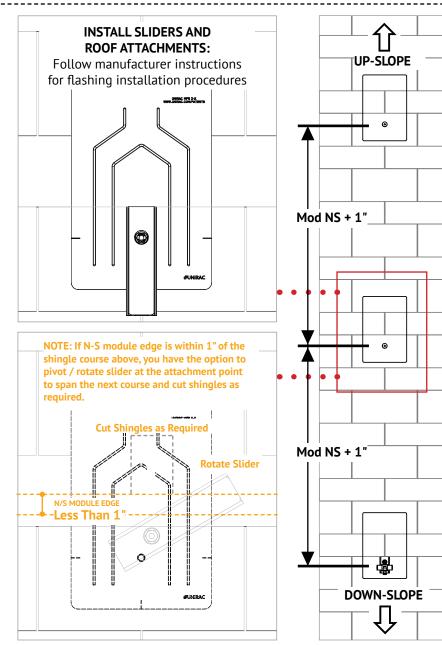






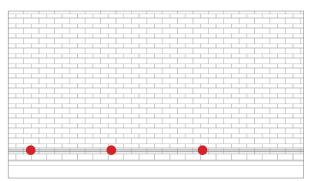

#### **ALIGN FRONT ROW:**


Align front row Trimrail<sup>™</sup> roof attachments with string line

#### TIP: Pull String-line across back (smooth) edge of attachments

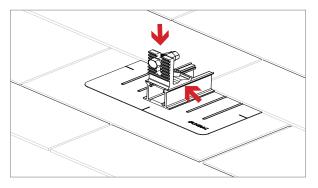


#### **TIGHTEN SLIDER:**

Tighten front row lag screw and TrimrailT<sup>M</sup> roof attachment channel clamp socket head cap screw.

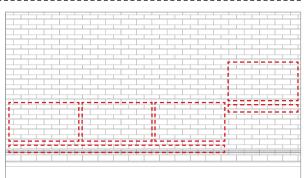

#### **TRIMRAIL PREPARATION:**

Determine overall length of Trimrail<sup>™</sup> for front row. Determine splice locations (if any) and Trimrail<sup>™</sup> lengths required. When 2 or less attachment points are available at front of module edge, a Floating Trim Clamp may be required, see page (L) for details.

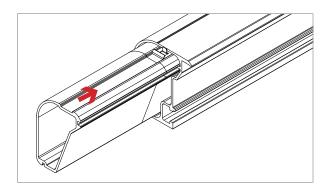


#### **INSTALL TRIMRAIL SPLICE:**

Place Trimrail<sup>™</sup> with front side up and firmly insert splice into Trimrail<sup>™</sup>, until it contacts vertical stop tab of steel bonding clip.



#### NOTE: Do not over-insert splice

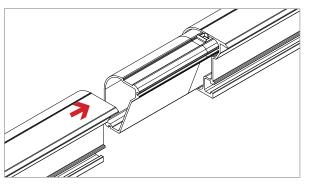


#### VERIFY SPLICE INSTALLATION:

Verify full engagement of splice clip at top of trim rail. Bonding between trim sections occurs through the splice.


While holding Trimrail<sup>™</sup> sections in alignment, join sections together with splice centered at joint and vertical stop tab in contact with both trimrail sections.

See the Design and Engineering Guide for details on regional max spans and overhang.




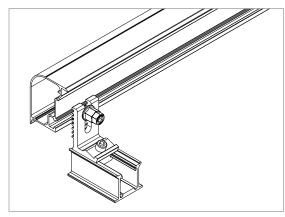

**ATTACH TRIMRAIL TO ROOF ATTACHMENT:** Attach rail using 3/8" hex bolt & Tri-drive or serrated flange nuts. Make sure Trimrail<sup>™</sup> is level across all Trimrail<sup>™</sup> roof attachments. After rail is level, tighten channel clamp bolts to secure Trimrail<sup>™</sup> roof attachments to channels.

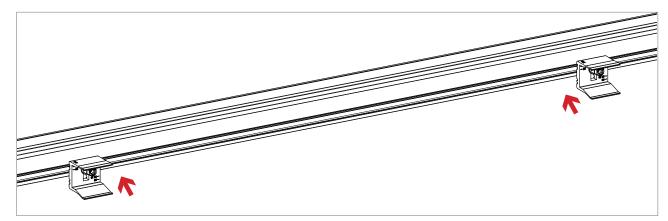



**INSTALL MODULE CLIPS ON TRIMRAIL:** Attach module clips to Trimrail using 3/8" T-bolts and Tri-drive or serrated flange nuts. A minimum of two clips are required per module. Refer to SFM D&E guide and U-builder for required position and quantity of module clips. NOTE: module clips may be pre-installed on trimrail prior to attaching trimrail to roof attachments

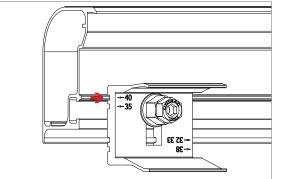

### POSITION MODULE CLIPS ACCORDING TO MODULE THICKNESS:

Align notch in module clip with trimrail rib according to module thickness (identified in mm on faces of module clips). Rotate clip to position at required location.

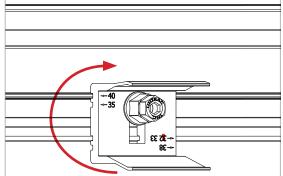

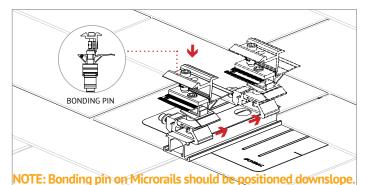



#### INSTALL MICRORAILS:

Install Microrail<sup>™</sup> at marked attachment points. Click Microrail<sup>™</sup> into sliders and push Microrail<sup>™</sup> to top of slider. Ensure that cap remains in upper most (40mm) position.



## **MODULE MOUNTING** INSTALLATION GUIDE PAGE

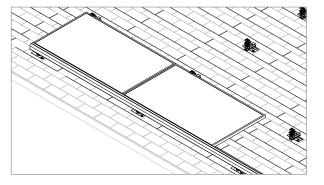

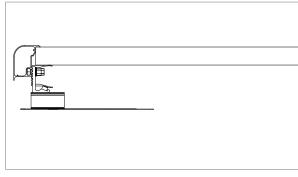


#### LAY IN MODULE(S):

Install first two (2) modules on bottom row. Install downhill end of module into the Trimrail<sup>TM</sup> and module clips first and then position uphill 2" microrails to support modules.

#### LAY IN MODULE(S):


Module should slide into catch features of the Trimrail<sup>™</sup> and module clips.

**SEAT MODULE(S):** Ensure that modules are properly seated in cap and base.

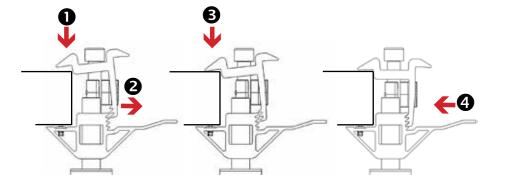

#### ADJUST MICRORAIL CAP DOWN TO ENGAGE WITH MODULE:

 With microrail pressed against module **1**. Apply downward pressure to module side of cap which will **2**. separate cap from base on capture side and allow cap to **3**. contact module and **4**. simultaneously re-engage to base at corresponding module height location.




#### VERIFY CORRECT POSITION OF CAP:

<sup>m</sup> Check position and verify cap on down-slope side is tight with no gap between cap and module after tightening bolt

### SFM SUN FRAME MICRORAIL

## **MODULE MOUNTING** INSTALLATION GUIDE PAGE

#### Wire management is performed after each row of modules is installed. Refer to wire management section (pp. L & M) for detailed instructions.

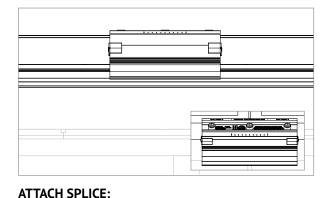

Attach splice at intersection of two (2) modules.


Guide.

indicator marks.

٠


Use attached splice if required per SFM D&E

Ensure minimum module engagement using

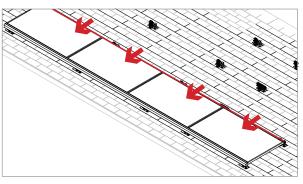


#### **FASTEN MODULES:**


Finish installing modules along row and tighten fastening bolts on microrails and splices to 20 ft. lbs after entire row is installed.

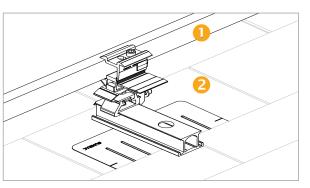


#### **TIGHTEN FASTENERS:** Tighten fasteners to 20 ft lbs.

NOTE: Tighten components in following order:
Module clamp socket head cap screw then
Dovetail socket head cap screw

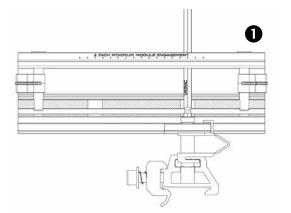

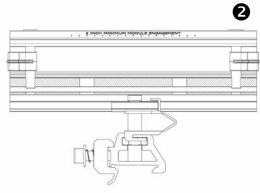


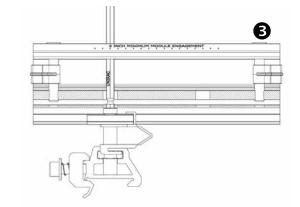

#### height adjustment feature head with clearance hole. 3. Rotate height adjustment feature counterclockwise until head enters clearance hole.

#### ATTACHED SPLICE ADJUSTMENT:

Tower and height adjustment feature may be located to alternate position as required to achieve minimum module engagement. 1. With 1/4" hex drive tool, rotate height adjustment feature clockwise until head clears thru-hole in base. 2. slide tower to alternate position and align.

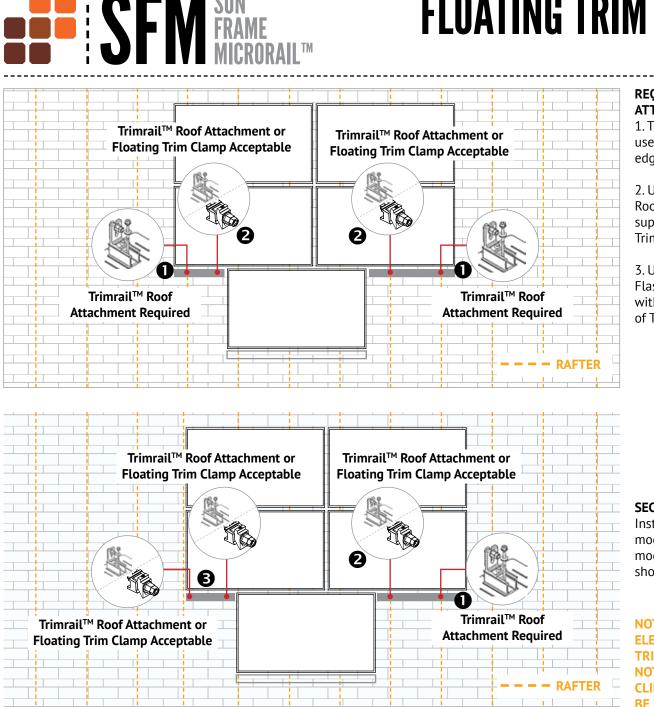


## **FLOATING TRIM INSTALLATION** INSTALLATION GUIDE PAGE

#### REQUIREMENTS FOR TRIMRAIL<sup>™</sup> ROOF ATTACHMENTS & FLOATING TRIM CLAMP:

1. Trimrail<sup>™</sup> Flashkit Roof Attachments shall be used at rafters nearest to and under outside edges of array (unless noted per item 3).

2. Use Floating Trim Clamp or Trimrail<sup>™</sup> Flashkit Roof Attachment attached to deck without rafter support on the longest "free" side if only one (1) Trimrail<sup>™</sup> Roof Attachment is utilized.

3. Use of 2 Floating Trim Clamps or 2 Trimrail<sup>™</sup> Flashkit Roof Attachments attached to deck without rafter support is acceptable if the section of Trimrail<sup>™</sup> being mounted is less than 24"

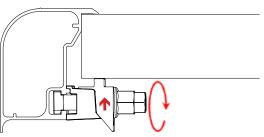


SECURING TRIMRAIL<sup>™</sup> WITH FLOATING TRIM CLAMPS: Installation of floating trim sections may occur before module is secured. Floating Trim Clamp captures module flange when nut is tightened to 20 ft-lbs as shown above.

NOTE: THE FLOATING TRIM CLIP WILL PROVIDE AN ELECTRICAL BOND BETWEEN THE MODULE AND THE TRIM RAIL. IF AT LEAST ONE FLOATING TRIM CLIP IS NOT ATTACHED TO A RAIL SECTION, A WIRE BONDING CLIP OR OTHER APPROVED BONDING DEVICE MUST BE INSTALLED.

## MICROINVERTER & WIRE MGMT. Installation guide Page



**SFN** FRAME

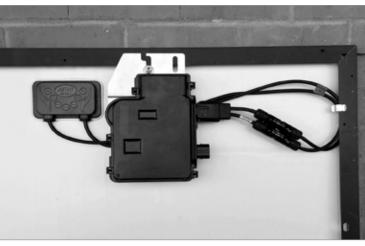





#### PRE-INSTALL MLPE:

Install MLPE in a location on the module that will not interfere with microrails or grounding lugs. To use trunk cable most efficiently, install MLPE components in the same locations on all modules in the same row. **TORQUE VALUE: 20FT-LBS** 

#### MLPE MOUNTING LOCATION & WIRE MANAGEMENT:

Install the MLPE Mount on the short side of the module when mounting in landscape orientation. Install MLPE Mount on the long side of module when mounting in portrait orientation.


ABOVE IMAGE: MLPE mount w/ microinverter & wire management BELOW IMAGE: MLPE mount w/ power optimizer & wire mgnt.






### **SFN** SUN FRAME MICRORAIL™

# MICROINVERTER & WIRE MGMT. INSTALLATION GUIDE PAGE

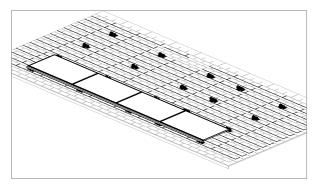


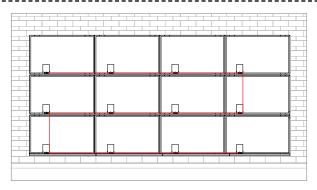

**MICROINVERTER:** Before installing a row of modules place microinverter trunk cable.


#### WIRE MANAGEMENT: Verify wire management is complete after each row is installed.

#### **EXAMPLES:**

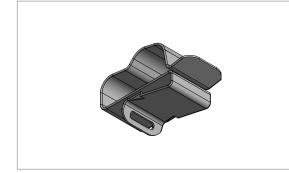

#### **MICROINVERTER TRUNK CABLE:**


The trunk cable can be managed securely by using stainless steel wire management clips attached to the module frame.

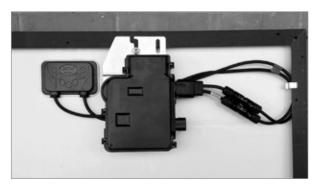

**TIPS & TRICKS:** Twisting the PV module wires and/or tying a loose knot can also help manage these wires.




# FINISHING TOUCHES INSTALLATION GUIDE PAGE

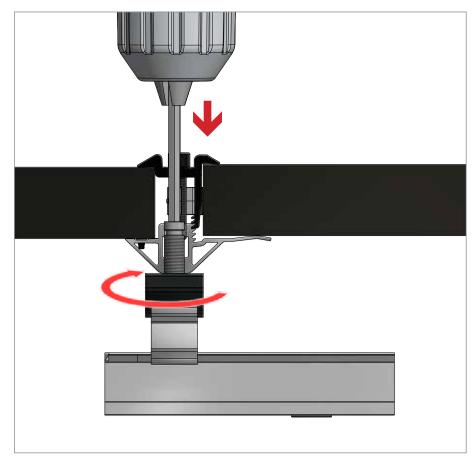

#### POST INSTALL HEIGHT ADJUSTMENT:

Height adjustment of each attached Microrail<sup>™</sup> assembly can be performed by rotating the height adjustment feature with a ¼" hex drive tool. Clockwise rotation will adjust the Microrail<sup>™</sup> upward. Counter clockwise rotation will adjust the Microrail<sup>™</sup> downward. Insert hex drive tool through holes in caps to access the height adjustment feature.

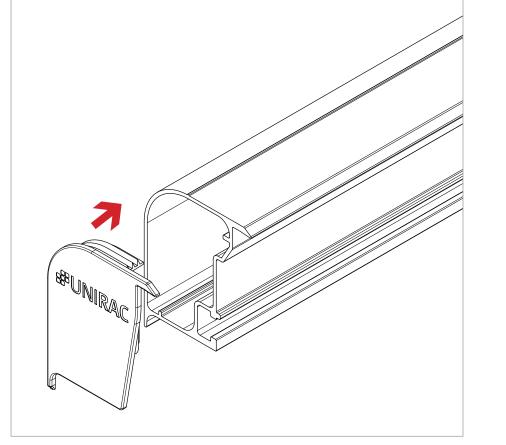


#### INSTALL END CAPS:

Install end caps at ends of exposed trimrail sections. Align end cap with trimrail and apply pressure until fully seated.




# FINISHING TOUCHES INSTALLATION GUIDE PAGE

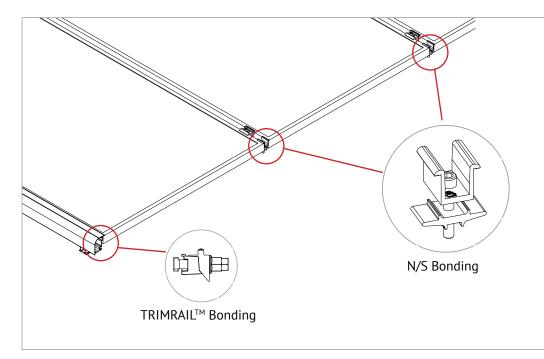




**N/S Bonding Clamp:** Insert clamp between modules. Torque to 20 ft.-lbs.

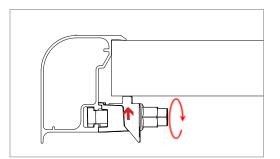


#### **TRIMRAIL<sup>™</sup> Bonding:**

Insert clamp and Tbolt into trimrail slot. Tighten tri-drive nut until bonding pin contacts module. Torque to 20 ft. lbs.

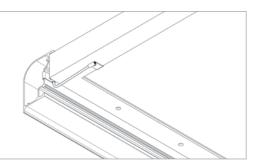


**Trimrail Bonding Alternate Method:** Attach a bonding clip from the Trimrail<sup>™</sup> to an adjacent module. Fully seat bonding clip until radius portion is in contact with Trimrail<sup>™</sup> mating surface and module flange.

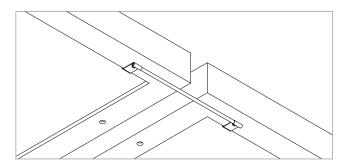

N/S Bonding Alternate Method: Fully seat bonding clip on each module flange to provide bond across N/S module gap.

## SYSTEM BONDING & GROUNDING PAGE

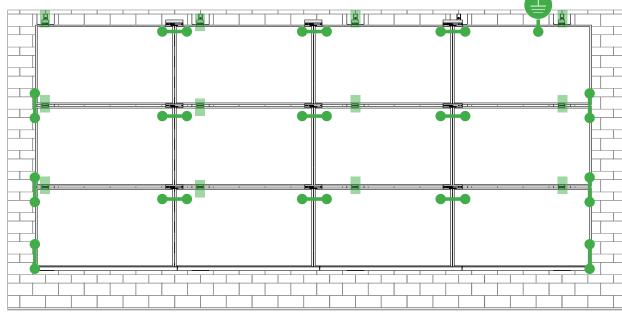

Star Washer is Single Use Only

TERMINAL TORQUE, Install Conductor and torque to the following: 4-6 AWG: 35in-lbs 8 AWG: 25 in-lbs 10-14 AWG: 20 in-lbs

S

#### LUG DETAIL & TORQUE INFO Ilsco Lay-In Lug (GBL-4DBT)

- 10-32 mounting hardware
- Torque = 5 ft-lb
- AWG 4-14 Solid or Stranded



#### LUG DETAIL & TORQUE INFO Ilsco Flange Lug(SGB-4)

- 1/4" mounting hardware
- Torque = 75 in-lb
- AWG 4-14 Solid or Stranded




TERMINAL TORQUE, Install Conductor and torque to the following: 6-14 AWG: 7ft-lbs

#### LUG DETAIL & TORQUE INFO


#### Wiley WEEBLug (6.7)

- 1/4" mounting hardware
- Torque = 10 ft-lb
- AWG 6-14 Solid or Stranded

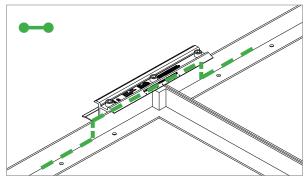


#### E-W BONDING PATH:

 E-W module to module bonding is accomplished with 2 pre-installed bonding pins which engage on the secure side of the MicrorailTM and splice.



#### N-S BONDING PATH: N-S module to module bonding is

 accomplished with bonding clamp with 2 integral bonding pins. (refer also to alternate method )



#### TRIMRAIL BONDING PATH:

Trimrail to module bonding is accomplished with bonding clamp with integral bonding pin and bonding T-bolt. (refer also to alternate method )

#### NOTE: ISOLATE COPPER FROM ALUMINUM CONTACT TO PREVENT CORROSION System bonding is accomplished through modules. System grounding accomplished by attaching

a ground lug to any module at a location on the module specified by the module manufacturer.

### **SFN** SUN FRAME MICRORAIL

## UL CODE COMPLIANCE NOTES Installation guide Page

#### SYSTEM LEVEL FIRE CLASSIFICATION

The system fire class rating requires installation in the manner specified in the SUNFRAME MICRORAIL (SFM) Installation Guide. SFM has been classified to the system level fire portion of UL 1703. This UL 1703 classification has been incorporated into the UL 2703 product certification. SFM has achieved Class A, B & C system level performance for low slope & steep sloped roofs when used in conjunction with type 1 and type 2 modules. Class A, B & C system level fire

performance is inherent in the SFM design, and no additional mitigation measures are required. The fire classification rating is valid for any roof pitch. There is no required minimum or maximum height limitation above the roof deck to maintain the Class A, B & C fire rating for SFM. SUNFRAME MICRORAIL<sup>™</sup> components shall be mounted over a fire resistant roof covering rated for the application.

Module Type	Roof Slope	System Level Fire Rating	Microrail Direction	Module Orientation	Mitigation Required
Type 1 and Type 2	Steep Slope & Low Slope	Class A, B & C	East-West	Landscape OR Portrait	None Required


#### **UL2703 TEST MODULES**

See page "S" for a list of modules that were electrically and mechanically tested or qualified with the SUNFRAME MICRORAIL (SFM) components outlined within this Installation Guide.

- Maximum Area of Module = 22.3 sqft
- UL2703 Design Load Ratings:
  - a) Downward Pressure 113 PSF / 5400 Pa
  - b) Upward Pressure 50 PSF / 2400 Pa
  - c) Down-Slope Load 30 PSF / 1400 Pa
- Tested Loads:
  - a) Downward Pressure 170 PSF / 8000 Pa
  - b) Upward Pressure 75 PSF / 3500 Pa
  - c) Down-Slope Load 45 PSF / 2100 Pa
- Maximum Span = 6ft
- Use with a maximum over current protection device OCPD of 30A
- System conforms to UL Std 2703, certified to LTR AE-001-2012
- Rated for a design load of 2400 Pa / 5400 Pa with 24 inch span

#### LABEL MARKINGS

- System fire class rating: See installation instructions for installation requirements to achieve a specified system fire class rating with Unirac.
- Unirac SUNFRAME MICRORAIL<sup>™</sup> is listed to UL 2703.
- All splices within a system are shipped with marking indicating date and location of manufacture.

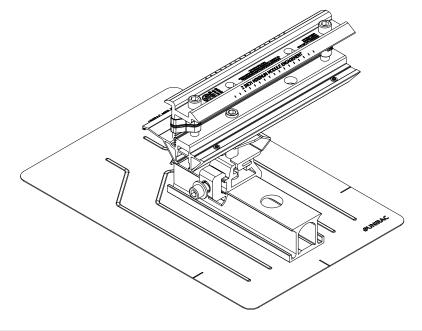



### **SFN** SUN FRAME MICRORA

## **TESTED / CERTIFIED MODULE LIST** INSTALLATION GUIDE PAGE


Manufacture	Module Model / Series	Manufacture	Module Model / Series	Manufacture	Module Model / Series
Aleo Astronergy	P-Series CHSM6612P, CHSM6612P/HV, CHSM6612M, CHSM6612M/HV, CHSM6610M (BL)(BF)/(HF), CHSM72M-HC	JA Solar	JAP6 60-xxx, JAM6-60-xxx/SI, JAM6(K)-60/ xxx, JAP6(k)-72-xxx/4BB, JAP72SYY-xxx/ZZ, JAP6(k)-60-xxx/4BB, JAP60SYY-xxx/ZZ, JAM6(k)-72-xxx/ZZ, JAM72SYY-xxx/ZZ, JAM6(k)-60-xxx/ZZ, JAM60SYY-xxx/ZZ. i. YY: 01, 02, 03, 09, 10 ii. ZZ: SC, PR, BP, HiT, IB, MW	REC	PEAK Energy Series, PEAK Energy BLK2 Series, PEAK Energy 72 Series, TwinPeak 2 Series,
Auxin	AXN6M610T, AXN6P610T, AXN6M612T & AXN6P612T				TwinPeak 2 BLK2 Series, TwinPeak Series
Axitec	AXI Power, AXI Premium, AXI Black Premium			Renesola	Vitrus2 Series & 156 Series
Boviet	BVM6610, BVM6612	Jinko	JKM & JKMS Series	Risen	RSM Series
BYD	P6K & MHK-36 Series	Kyocera	KU Series	S-Energy	SN72 & SN60 Series (40mm)
	CS6V-M, CS6P-P, CS6K-M, CS5A-M,		LG xxx S1C-A5, LG xxx N1C-A5, LGxxxQ1C(Q1K)-A5, LGxxxN1C(N1K)-A5, LGxxxS1CA5, LGxxxA1C-A5, LGxxxN2T-A4, LGxxxN2T-A5, LGxxxN2W-A5	Seraphim	SEG-6 & SRP-6 Series
	CS6K-MS, CS6U-P, CS6U-M, CS6X-P, CS6K-MS,			Sharp	NU-SA & NU-SC Series
Canadian Solar         CS6K-M, CS6K-P, CS6P-P, CS6P-M, CS3U-P,           CS3U-MS, CS3K-P, CS3K-MS, CS1K-MS, CS3K,           CS3U, CS3U, CS3U, CS3K-MB-AG, CS6K,           CS6U, CS3L, CS3W, CS1H-MS, CS1U-MS				Silfab	SLA, SLG & BC Series
		LG Electronics		Solaria	PowerXT
	LG Electronics	LGxxxS2W-A5, LGxxxE1C-A5, LGxxxS2W-G4 LGxxxN1C(N1K)-G4, LGxxxN2W-G4, LGxxxS1C-G4, LGxxxE1K-A5, LGxxxN2T-J5,	SolarWorld	Sunmodule Protect, Sunmodule Plus	
			Sonali	SS 230 - 265	
Centrosolar America	C-Series & E-Series		LGxxxN1K(N1C)-V5, LGxxxQ1C(N2W)-V5,	Suntech	STP
CT2xxMxx-01, CT2xxPx		LONGi	LR6-60 & LR6-72 Series, LR4-60 & LR4-72 Series	Suniva	MV Series & Optimus Series
CertainTeed	CTxxxMxx-02, CTxxxM-03, CTxxxMxx-04, CTxxxHC11-04			Sun Edison/Flextronics	F-Series, R-Series & FLEX FXS Series
Dehui	DH-60M	Mission Solar Energy	MSE Series	SunPower	X-Series, E-Series & P-Series
Eco Solargy	Orion 1000 & Apollo 1000	Mitsubishi	MJE & MLE Series	Talesun	TP572, TP596, TP654, TP660,
FreeVolt	Mono PERC	Neo Solar Power Co.	D6M & D6P Series		TP672, Hipor M, Smart
GCL	GCL-P6 & GCL-M6 Series	Panasonic	VBHNxxxSA15 & SA16, VBHNxxxSA17 & SA18, VBHNxxxSA17(E/G) & SA18E, VBHNxxxKA01 & KA03 & KA04, VBHNxxxZA01, VBHNxxxZA02, VBHNxxxZA03, VBHNxxxZA04	Tesla	SC, SC B, SC B1, SC B2
Hansol	TD-AN3, TD-AN4, UB-AN1, UD-AN1			Trina	PA05, PD05, DD05, DE06, DD06, PE06, PD14, PE14, DD14, DE14, DE15, PE15H
Heliene	36M, 60M, 60P, 72M & 72P Series			Upsolar	UP-MxxxP(-B), UP-MxxxM(-B)
	HT60-156(M) (NDV) (-F),			URE	D7MxxxH8A, D7KxxxH8A, D7MxxxH7A
HT Solar	HT 72-156(M/P)			Vikram	Eldora, Solivo, Somera
Hyundai	KG, MG, TG, RI, RG, TI, MI, HI & KI Series	Peimar	SGxxxM (FB/BF)	Waaree	AC & Adiya Series
TEK	iT, iT-HE & iT-SE Series	Phono Solar	PS-60, PS-72	Winaico	WST & WSP Series
Japan Solar	JPS-60 & JPS-72 Series	Q.Cells	Plus, Pro, Peak, G3, G4, G5, G6(+), G7, G8(+) Pro, Peak L-G2, L-G4, L-G5, L-G6, L-G7	Yingli	YGE & YLM Series

 
\_\_\_\_\_

Please see the SFM UL2703Construction Data Report at Unirac.com to ensure the exact solar module selected is approved for use with SFM. SFM Infinity is not compatible with module frame height of less than 32mm and more than 40mm. See page J for further information.




## **MODULE MAINTENANCE** INSTALLATION GUIDE PAGE

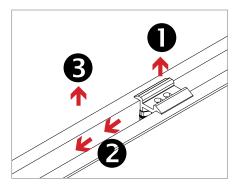




**REMOVE 8" CAPS:** 1.Remove (2) cap bolts 2. Separate cap from base by moving east/west 3. Remove cap

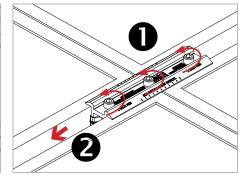


**SLIDE FLOATING SPLICE:** 1. Loosen (3) cap bolts approx. 3 turns. 2. Slide entire floating splice away from module being removed.

CAUTION: DO NOT FULLY REMOVE FASTENERS

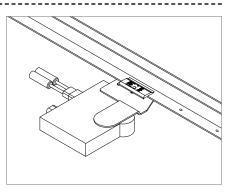

LIFT MODULE AND DISCONNECT MLPE CABLES

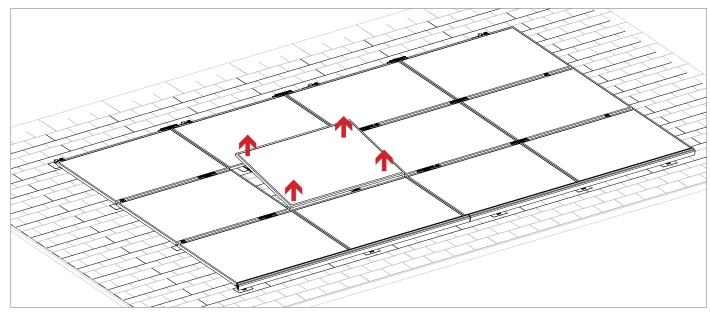

Bonding note: If both sides of array are bonded with NS Bonding Clips, as recommended, then no additional bonding is required for module maintenance.

If necessary, on the row of modules containing the module being removed, one additional bonding clip can be added to the edge of the array opposite of the edge with bonding clips already installed. This is only necessary when the module removal would break the bonding path.

**REMOVE MODULE. REVERSE STEPS TO REPLACE MODULE REMOVED** 



### **CONSIDERATIONS & MAINTENANCE** INSTALLATION GUIDE PAGE

#### ELECTRICAL CONSIDERATIONS

SUNFRAME Microrail is intended to be used with PV modules that have a system voltage less than or equal to that allowable by the NEC. A minimum 10AWG, 105°C copper grounding conductor should be used to ground a system, according to the National Electric Code (NEC). It is the installer's responsibility to check local codes, which may vary.

#### INTERCONNECTION INFORMATION

There is no size constraint beyond structural thermal expansion limits on how many SUNFRAME Microrails & PV modules can be mechanically interconnected for any given configuration, provided that the installation meets the requirements of applicable building and fire codes.

#### **GROUNDING NOTES**

The installation must be conducted in accordance with the National Electric Code (NEC) and the authority having jurisdiction. Please refer to these resources in your location for required grounding lug quantities specific to your project. The grounding / bonding components may overhang parts of the array so care must be taken when walking around the array to avoid damage. Conductor fastener torque values depend on conductor size. This racking system may be used to ground and/or mount a PV module complying with UL 1703 only when the specific module has been evaluated for grounding and/or mounting in compliance with the included instruction

#### PERIODIC INSPECTION

Conduct periodic inspections for loose components, loose fasteners or any corrosion, immediately replace any affected components.